
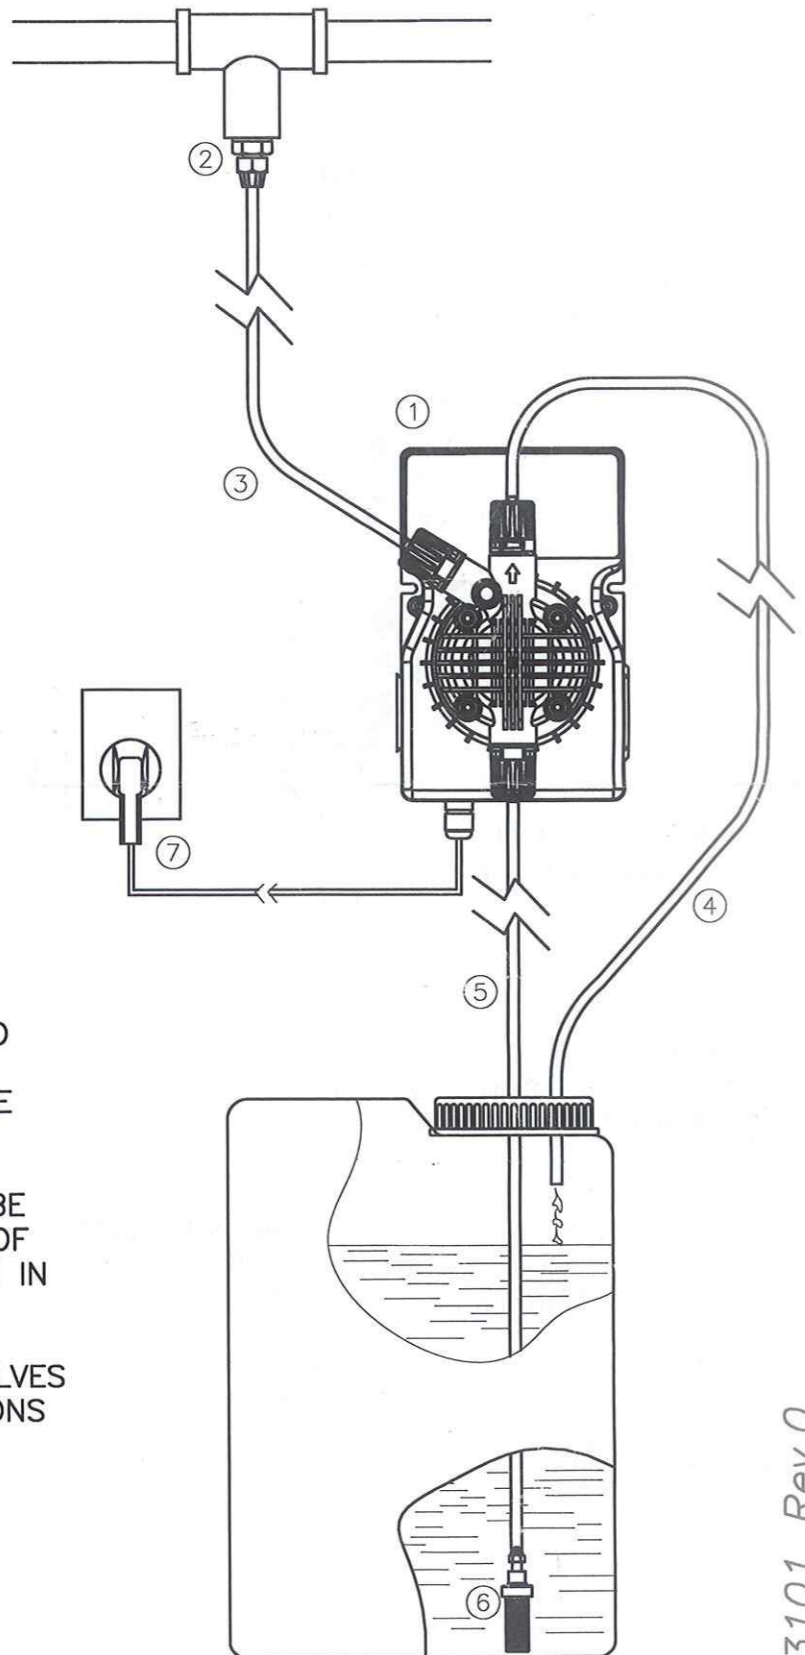


PUMP HEAD WITH AUTOMATIC AIR BLEED INSTALLATION GUIDE

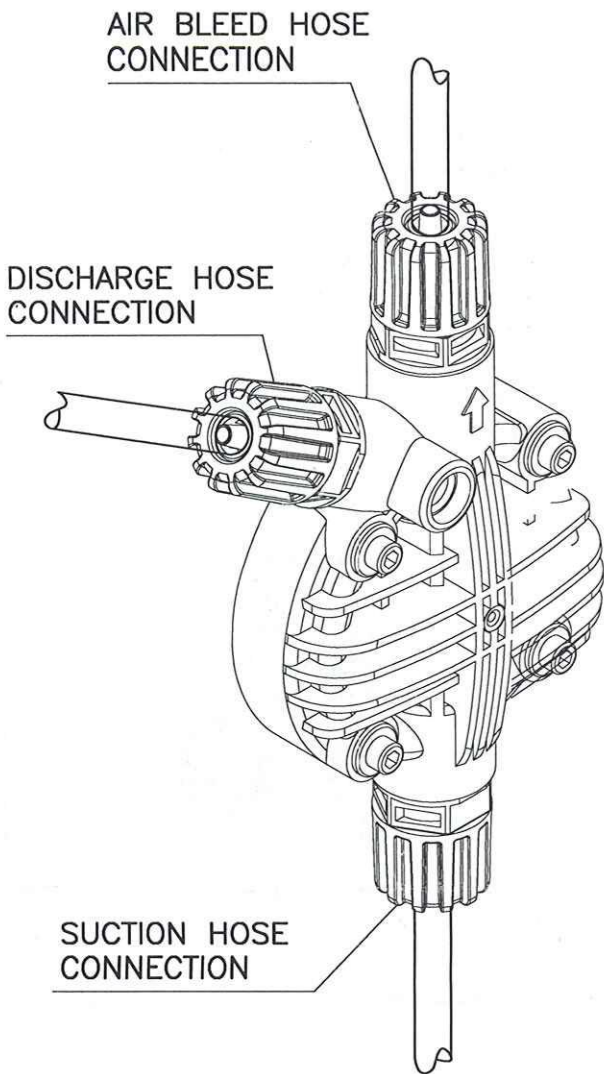

TO CONNECT THE AIR BLEED HOSE ONTO THE NIPPLE FOLLOW SAME PROCEDURES DESCRIBED FOR SUCTION AND DISCHARGE HOSES.

END OF THE AIR BLEED HOSE HAS TO BE POSITIONED ABOVE THE FREE SURFACE OF THE LIQUID INSIDE THE TANK AS SHOWN IN FIGURE.

SUCTION, DISCHARGE AND AIR BLEED VALVES ARE DIFFERENT, FOLLOW THE INSTRUCTIONS SHOWN IN THIS GUIDE.

- 1 - DOSING PUMP
- 2 - INJECTION VALVE
- 3 - DISCHARGE HOSE
- 4 - AIR BLEED HOSE
- 5 - SUCTION HOSE
- 6 - FOOT VALVE
- 7 - POWER SUPPLY CABLE